



# SOLO

## BLADE CHANGE

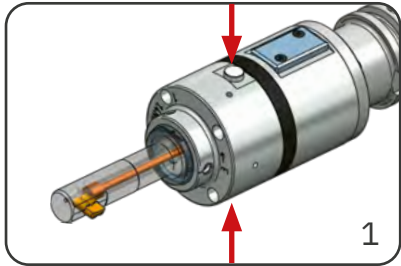


### Dismantling of blade:

Push both buttons of the control unit at the same time. The blade control and the blade control pin will be retracted. Thus, the blade is released.

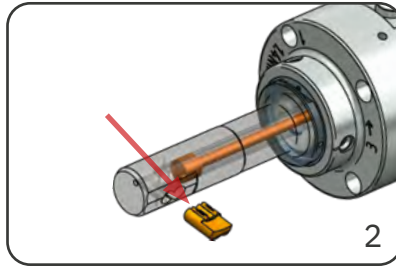


Push out the blade. Keep the buttons pressed until the blade is completely removed.

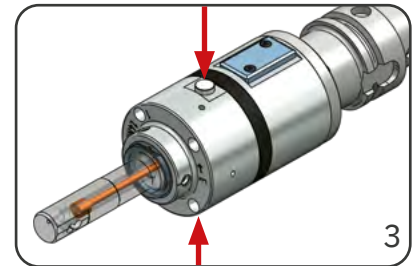


### Insertion of blade:


Push both buttons of the control unit at the same time.

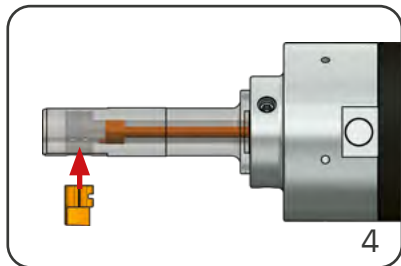

Insert blade in blade window to the extent that the cutting part of the blade remains fully visible. To do this keep on pushing the buttons of the control unit.

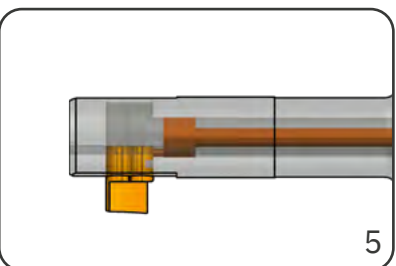

Release the buttons. Make sure that the buttons are extended fully.

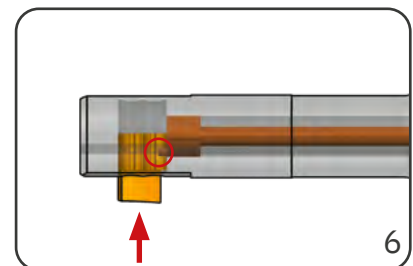

Position the blade in the blade window so that the blade control pin audibly engages into the blade.



### NOTE

Attention: Please check the position of the blade control pin. If the blade housing or/and the blade control is assembled in the wrong way there is a danger of the cutting edge of the carbide blade being hit.